®

®

⚠

○

○

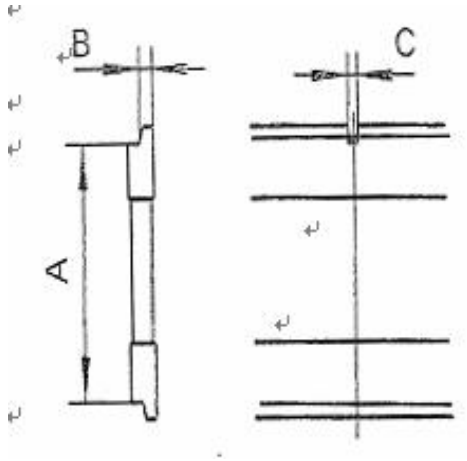
B
A
C

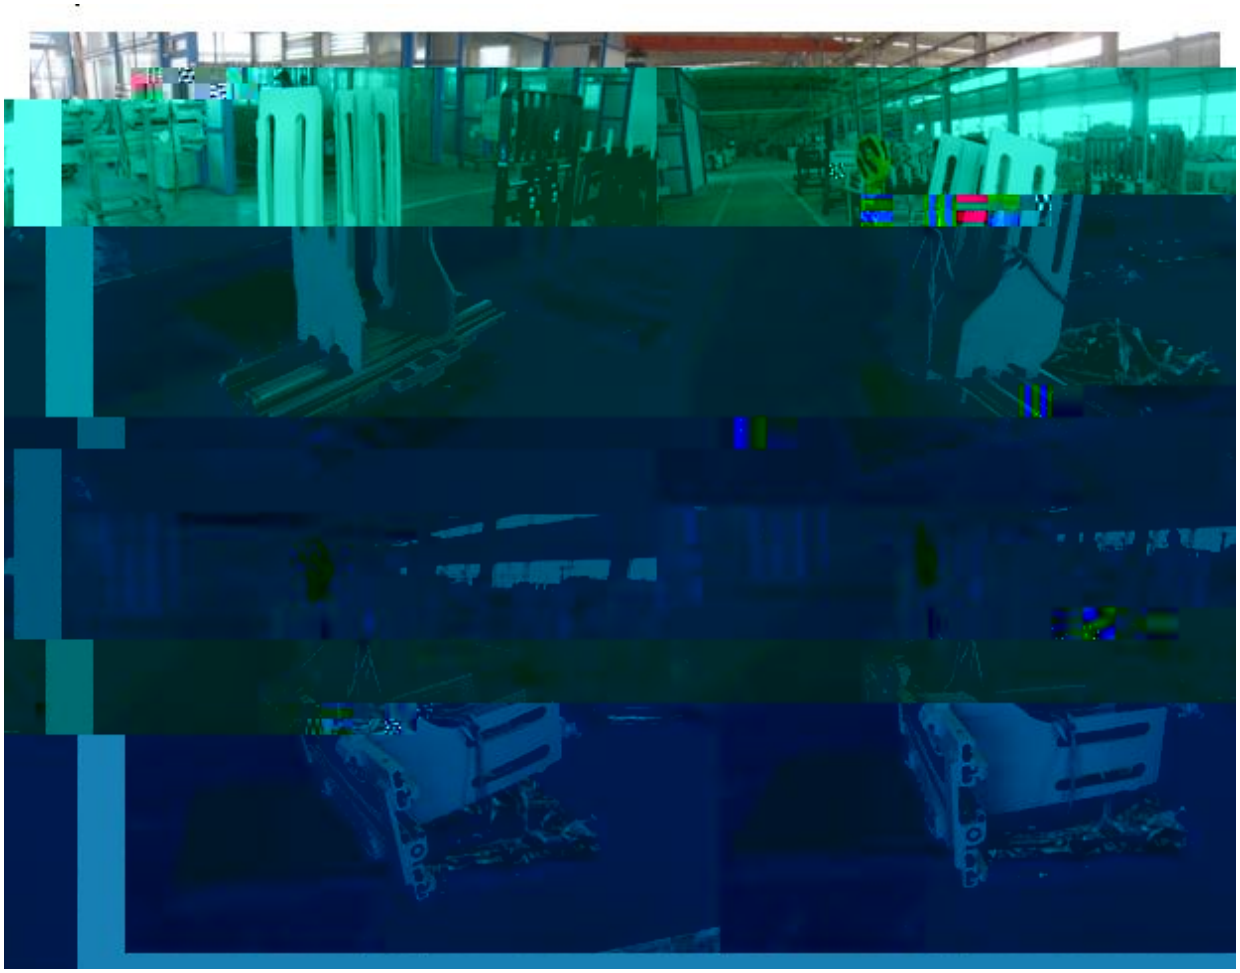

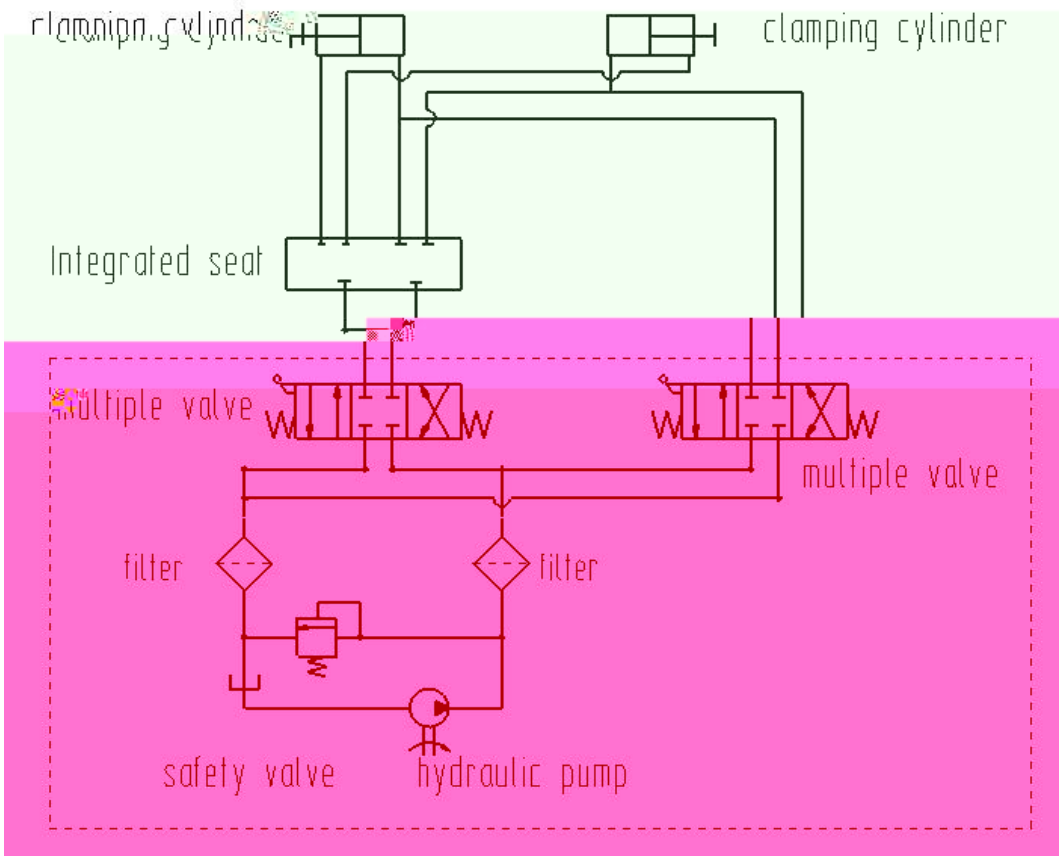
clamping cylinder
clamping cylinder
Integrated seat
multiple valve
multiple valve
filter
filter
safety valve
hydraulic pump

⚠

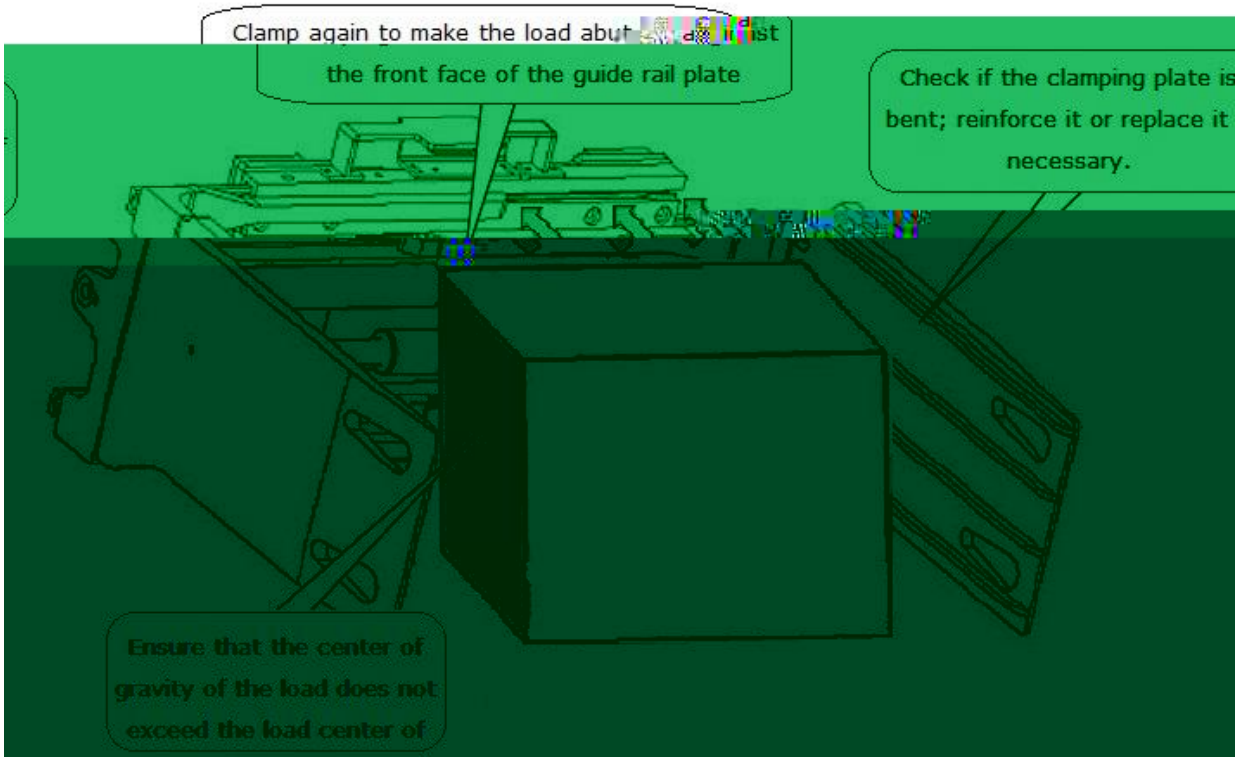
Clamp again to make the load abut against
the front face of the guide rail plate
Check if the clamping plate is
bent; reinforce it or replace it
necessary.
Ensure that the center of
gravity of the load does not
exceed the load center of

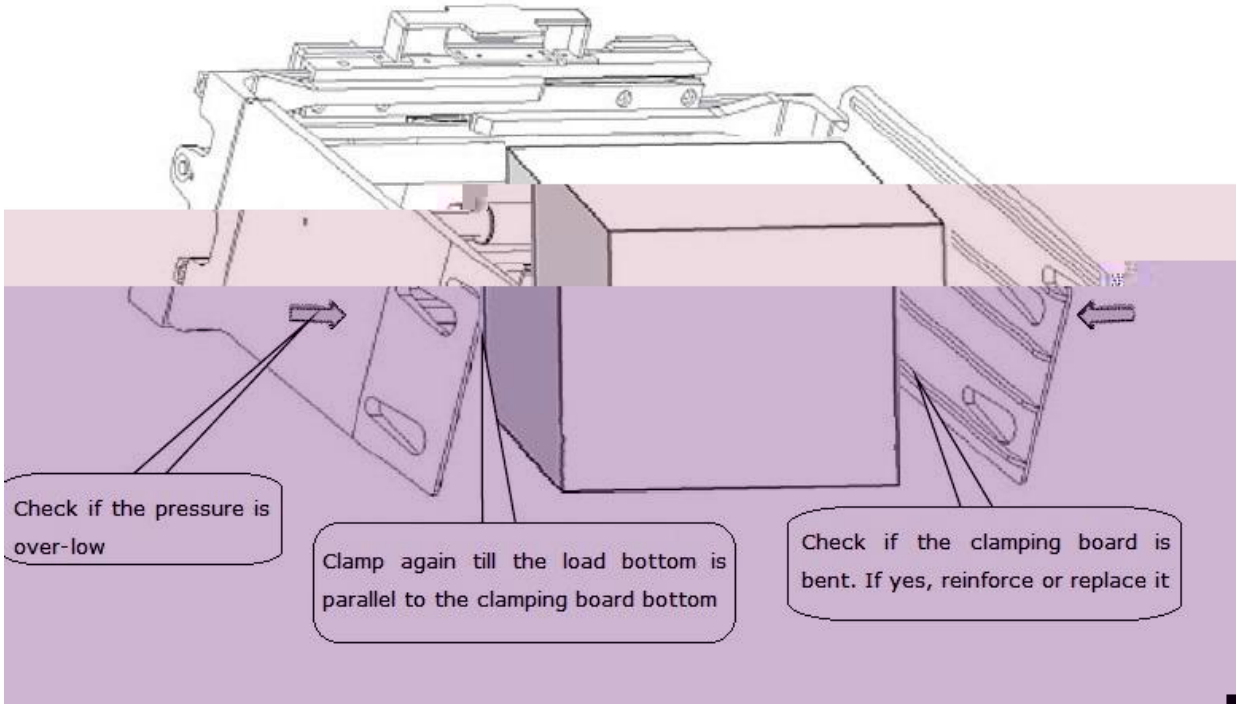
Check if the pressure is over-low
Clamp again till the load bottom is parallel to the clamping board bottom
Check if the clamping board is bent. If yes, reinforce or replace it